




# LeapFrog Scribble and Write Speaker Replacement

Replace the speaker in your LeapFrog Scribble and Write.

Written By: Anthony Kidd

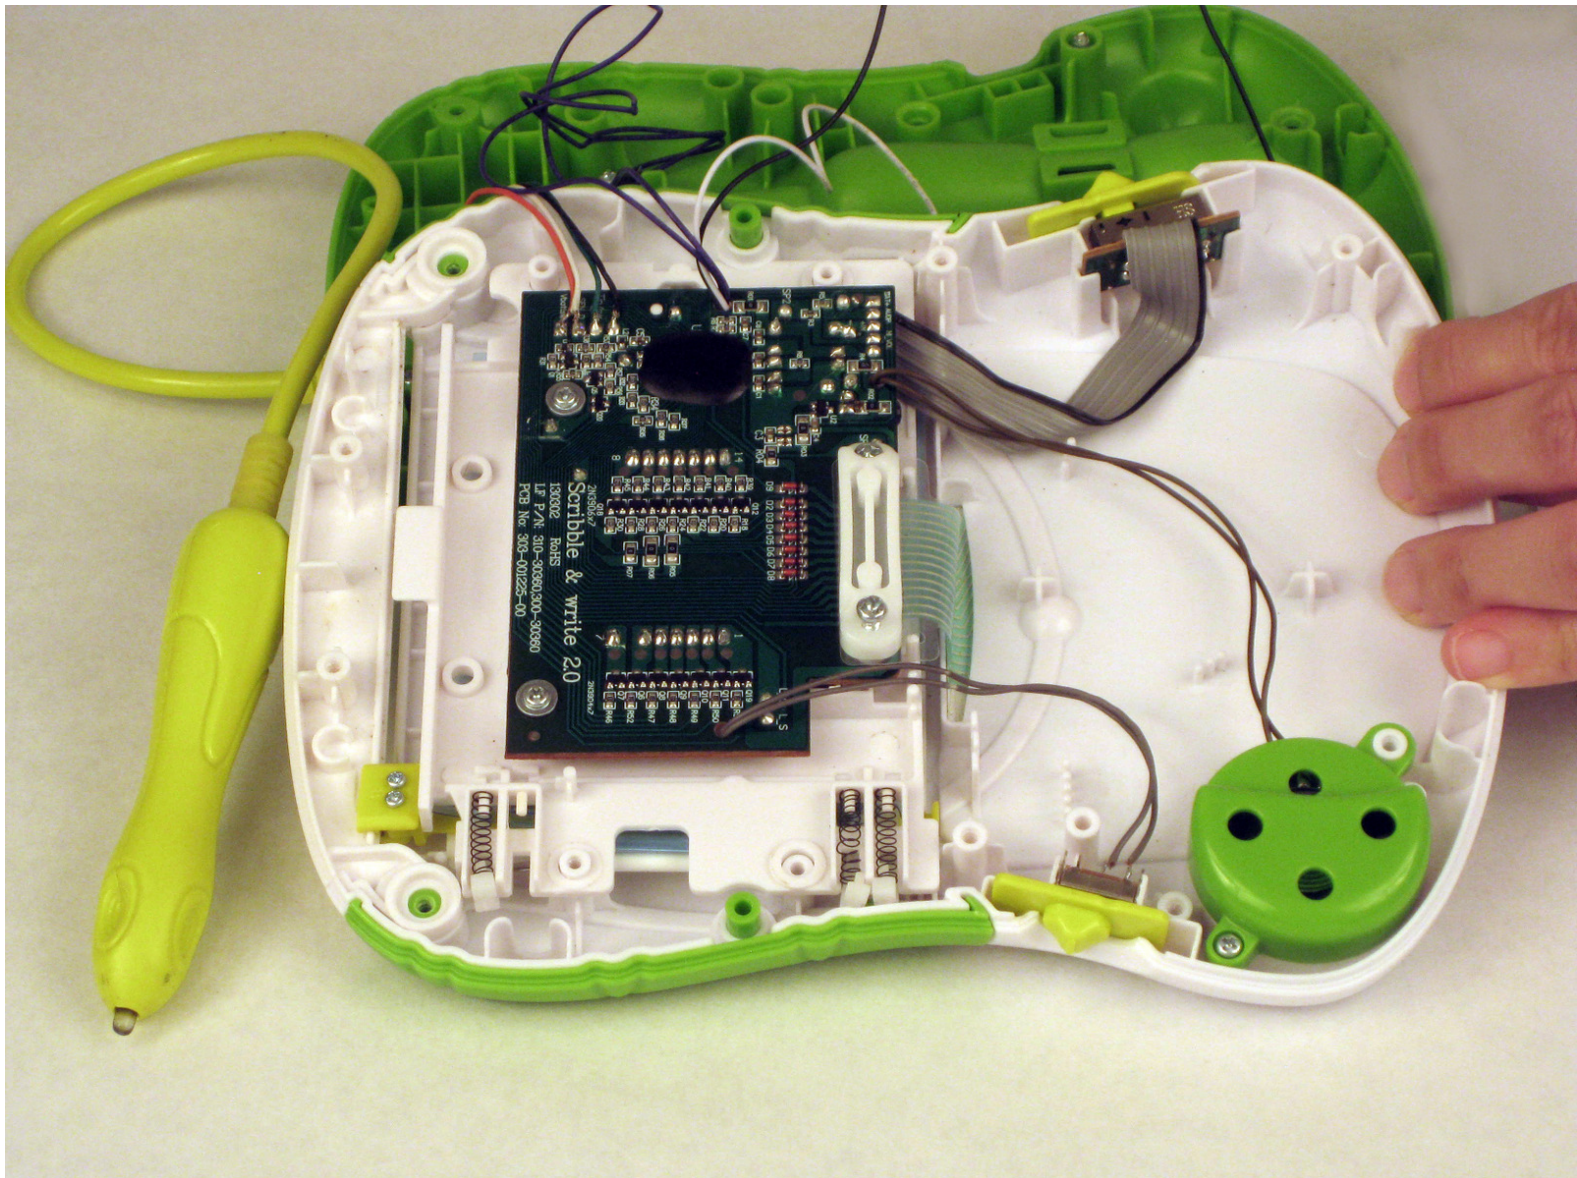

## INTRODUCTION

Your toy's sound may have become muffled or distorted. This issue may be a faulty speaker that will need to be replaced. You will need to be familiar with using a soldering iron before doing this repair.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Soldering Station](#) (1)
-




## Step 1 — Speaker




- Turn your toy over so that the back is facing upward.

## Step 2

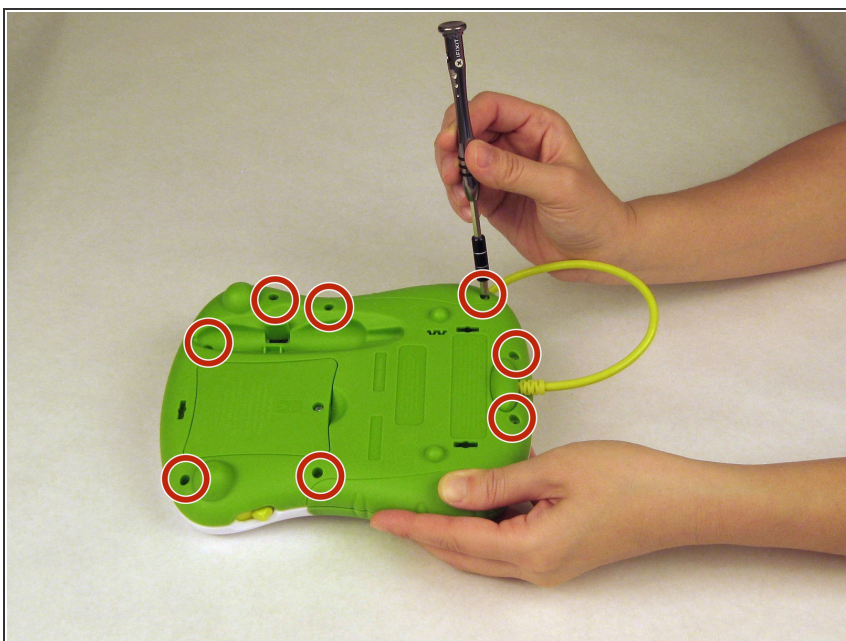


- Using a Phillips head screwdriver, carefully unscrew all 9 screws on the back of your toy. Be careful not to misplace the screws.

## Step 3

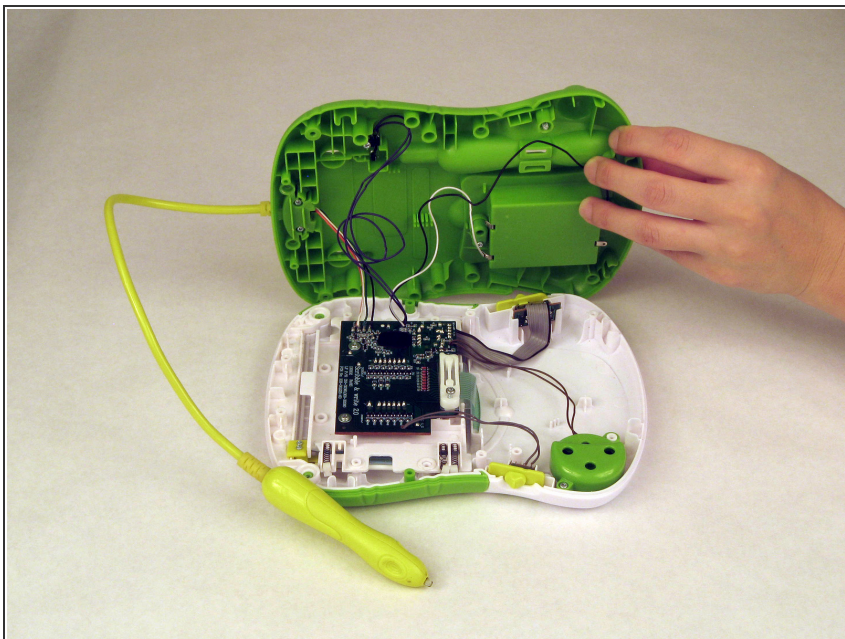


- Very carefully, remove the back of your toy.

## Step 4

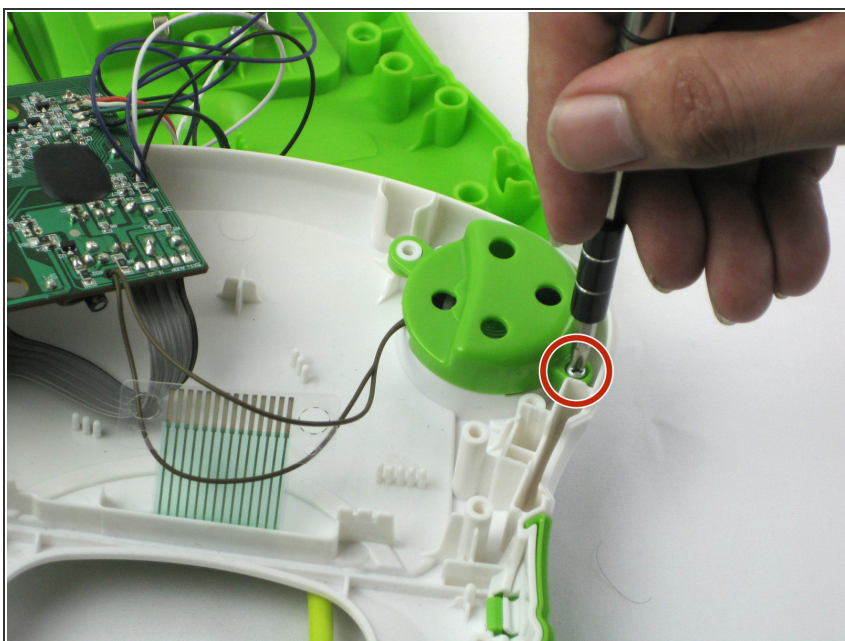

- Using a Phillips head screwdriver, unscrew the speaker. It is circular and green.

## Step 5

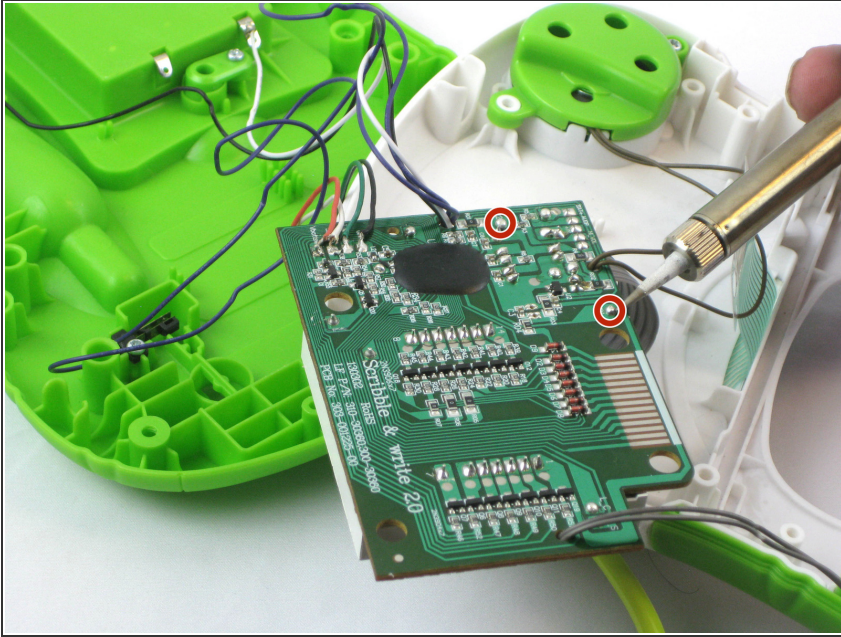

- Lastly, use a solder iron to remove the wiring from the speaker and motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-21 08:50:17 PM.